

# record APS 20 for secured and hygienic entrances

Special lock for reduced opening ( $0 > 18\text{cm}$ )



## Hygienic & Safe

record APS 20 is a solution for example pharmacies to prevent against hygienic and to secure the entrance during the night sales or during the day in case of a containment

It allows to sale through the door in a safe way

It allows to sale through the door in a hygienic way





## Descriptions

- record APS 20 function is an extra locking device located in the area of the carriages, whose extended bar prevents mechanically the door leaves from being opened beyond a predefined distance
- record APS 20 can be added to our standard System 20 drive
- record APS can also be easily added to existing System 20 sliding doors

## Ranges of application



- Pharmacies, Laboratories, Fast-Food, banks, Post-Offices, exchange offices, etc.

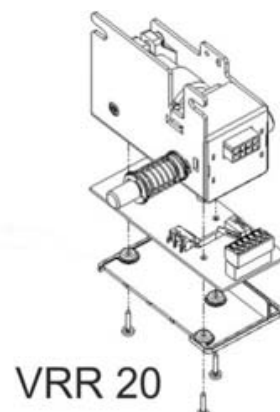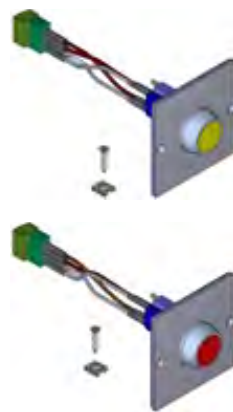

record APS 20



# record APS 20 for secured and hygienic entrances

Special lock for reduced opening (0 > 18cm)

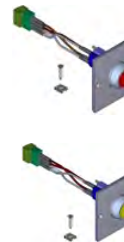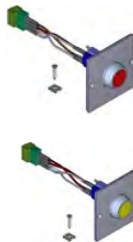

## Functioning (User instruction)

- Lock the door with the BDE-D (operating mode "Locked").
- Actuate the yellow push button. - The yellow lamp indicates that the APS function is enabled.
- The additional locking device travels into the locked position (mechanical stop for APS opening).
- The door can be opened and closed with the red push button for 0 to 18 cm only
- Deactivate the APS function with the yellow push button  
(\*The BDE-D is disabled (message "BDE-D no priority" appears as soon as a key is pressed).

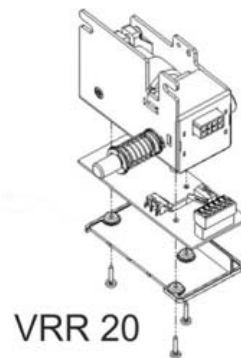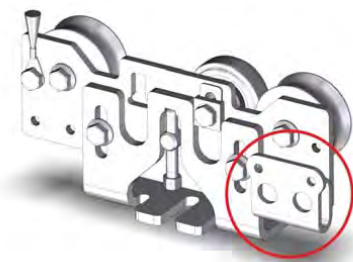

VRR 20